

use with this kit Bullet Sizer & Punch to Order corresponding

BS4310 7111 34307 Ζ1

Bullet Sizer & Punch more sizes on leeprecision.com

Product	Dia.	Product	Dia.	Product	Dia.
91505	.224	91514	.314	91523	.427
91506	.225	91515	.323	91524	.429
91507	.243	91516	.329	91525	.430
91508	.278	91517	.339	91526	.451
91509	.284	91518	.356	91527	.452
91510	.285	91519	.357	91528	.454
91511	.308	91520	.358	91529	.457
91512	.309	91521	.401	91530	.501
91513	.311	91522	.410	91531	.510

Bottle Adapter #RS4259

Breech Lock Bullet Sizer insert #BS4260





WARNING: Handling lead objects may expose you and others in the area to lead, which is known to the State of California to cause reproductive harm and cancer. For more information, go to www.P65Warnings.ca.gov.



 
BREECH LOCK BULLET SIZER KIT

Lubricate Bullets



Product # 90177

Liquid Alox





Gently shake the bullets in orbital motion to coat bullets. If they do not coat completely, add a little more lube.



Spread bullets on wax paper, let dry overnight

Fastest and easiest way to size cast bullets:

APP PRESS #90933





(4) Select appropriate bullet sizer and punch.





Roll mark in first



Insert roll marked end of bullet sizer in first into the Breech Lock insert.



Install aluminum bottle adapter.

Product# 91151



Install bottle adapter on to bullet sizer insert.





The clear bottle or an empty powder container can be used to catch sized bullets.



Install breech lock bullet sizer assembly in APP base casting.

Tighten ⅓ of a turn counter clockwise.

Install shell holder adapter and appropriate sized punch in upper APP casting.



Load the feed tube with bullets (nose first)

Sized bullets will collect in bottle adapter. Or you can use your empty powder bottle or any bottle with a 53mm or 43mm thread.

Breech Lock Bullet Sizing Kit instructions for single stage press






Breech Lock Bullet Sizer insert #BS4260



Install the Breech Lock Bullet Sizer insert into press.

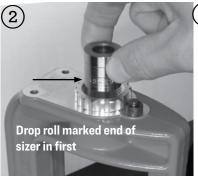

Slide the sizer into the Breech Lock Bullet Sizer insert.



Install the bullet punch into the ram. This fits all rams that use standard press shell holders.





Place bullet on punch and push through sizer.

