

I. Measure projectile's cylindrical portion, "A" section.

Refer to the bullet length chart (see reverse) to confirm the two detent balls are installed in correct

holes of bullet feed sleeve. Detent balls are installed in upper holes from factory.

- 2. Thread die into the press a couple of turns.
- 3. Place a flared case into shell plate.
- 4. Fill the bullet feed sleeve with bullets, base down, with one protruding.
- 5. Raise case to top of stroke. Screw die clockwise until the bullet stack drops plus an additional $\frac{1}{2}$ turn.
- 6. Finger tighten lock ring, tighten split clamp with 3/2" hex key.

TIPS FOR SUCCESS:

- Change ball position over a tray or container to prevent losing balls. (Replacements #92061)
- 2 Keep bullet stack near the top of the sleeve, weight of bullets aids in seating a bullet into the case.
- 3 Adequate case mouth flare is required to reduce bullet tipping.




Inline Bullet Feed
26 Cal.(6.5 Creedmoor and similar)



LEE INLINE BULLET FEED DIE

LEE PRECISION, INC

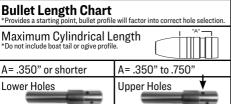

For the ultimate in convenience, order the gatling style magazine feed.

If loading lower quantities, consider the single tube adapter. # 92024



Solution

Die must be screwed into press further.

Bullet is too short for hole selected, move balls to lower hole.

Bullet is too long for the hole being utilized, move balls to higher hole.

Replacement balls

4275 COUNTY ROAD II - HARTFORD WI 53027

92061

LEE PRECISION, INC. www.leeprecision.com

M

WARNING: This product may contain steel alloyed with trace amounts of lead and other elements which are known to the State of California to cause reproductive harm and cancer. For more information, go to www.P65Warnings.ca.gov. To prevent exposure, do not alter the product by welding, grinding, etc.

Troubleshooting

No bullets feed, but sleeve

Multiple bullets feed, or one feeds but sleeve does not fully return to

No bullets feed and sleeve does

not fully return to home position.

returns to home position.

Symptom

home position.